

DE-4000 IP Address Instructions

DE-4000 Configurable Safety Shutdown and Control System How to change a Windows 10 computer's IP address in order to hardwire the DE-4000. Form DE-4000 IPAI 9-19





OVERVIEW AND DESCRIPTION

Operating the DE-4000 Series Configurable Safety Shutdown and Control System via a computer running Microsoft Windows 10 requires a temporary change to the computer's IP address. This document outlines the steps necessary to accomplish this. The default IP address for the DE-4000 is 98.102.65.174

1.0 CLICK THE WINDOWS ICON

The Windows icon is in the bottom left corner of your computer screen.



2.0 CLICK ON CONTROL PANEL



3.0 CLICK ON NETWORK AND SHARING CENTER



NOTE: REMEMBER TO REVERT TO THE COMPUTER'S DEFAULT ADDRESS WHEN DE-4000 OPERATION HAS BEEN COMPLETED.



4.0 CLICK ON CHANGE ADAPTER SETTINGS



5.0 RIGHT-CLICK ON ETHERNET



6.0 SELECT PROPERTIES

...from the drop-down menu.





7.0 DOUBLE-CLICK ON INTERNET PROTOCOL VERSION 4 (TCP/IPv4)

Networking	Authentication	Sharing	
Connect us	sing:		
inte	I(R) Ethernet Co	nnection (7) I219-LM	
This conne	ection uses the fo	ollowing items:	
🗹 🤩 Cli	ent for Microsoft	Networks	
🗹 📜 Fil	e and Printer Sh	aring for Microsoft Ne	etworks
🗹 📜 Qo	S Packet Scher	luler	
	TOUR ANDIO C	Dealers Files Dail	
Fo	rtiClient NDIS 6.	Packet Filter Driver	
Fo	rtiClient NDIS 6.: ernet Protocol V crosoft Network	3 Packet Filter Driver ersion 4 (TCP/IPv4) Adapter Multiplerer	Totocol
E S Fo I S Internet I S Min I S Min	rtiClient NDIS 6. ernet Protocol V crosoft Network crosoft LLDP Pro	3 Packet Filter Driver ersion 4 (TCP/IPv4) Adapter Multiplettor btocol Driver	rotocol
Internet in	rtiClient NDIS 6. ernet Protocol V crosoft Network crosoft LLDP Pro	3 Packet Filter Driver ersion 4 (TCP/IPv4) Adapter Multinlever otocol Driver	rotocol

8.0 SELECT USE THE FOLLOWING IP ADDRESS, THEN ENTER THE ADDRESS SHOWN, 98 102 65 200

ternet Protocol Version 4 (TCP/IPv4) Properties	×
eneral	
You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.	NOTE: TO REVERT TO YOUR COMPUTER'S DEFAULT IP ADDRESS, SELECT "OPTAIN AN IP ADDRESS
Ochtain an IP address automatically	AUTOMATICALLY" FROM THE PANEL
OUse the following IP address:	SHOWN HEAR, THEN CLICK ON "OK"
IP address: 98 . 102 . 65 . 200	
Subnet mask: 255 . 0 . 0 . 0	
Default gateway:	
Obtain DNS server address automatically	
Use the following DNS server addresses	
Preferred DNS server:	
Alternate DNS server:	
Validate settings upon exit Advanced	d
	ancel

9.0 CLICK ON OK