SERVICE BULLETIN

NUMBER 516 9/6/13

Damage caused by welding



The Altronic Instrumentation within the Control/Shutdown Panel may contain ground connections within the panel and remote devices that can be damaged by welding on the package!

All devices with pluggable terminations *must* be disconnected from the devices before welding! This includes AFR controllers, Annunciators and any other device with a pluggable connector!

